




Commercial Manual
COSTERA Series
Air Cooled Horizontal Package Unit
12.5 TON



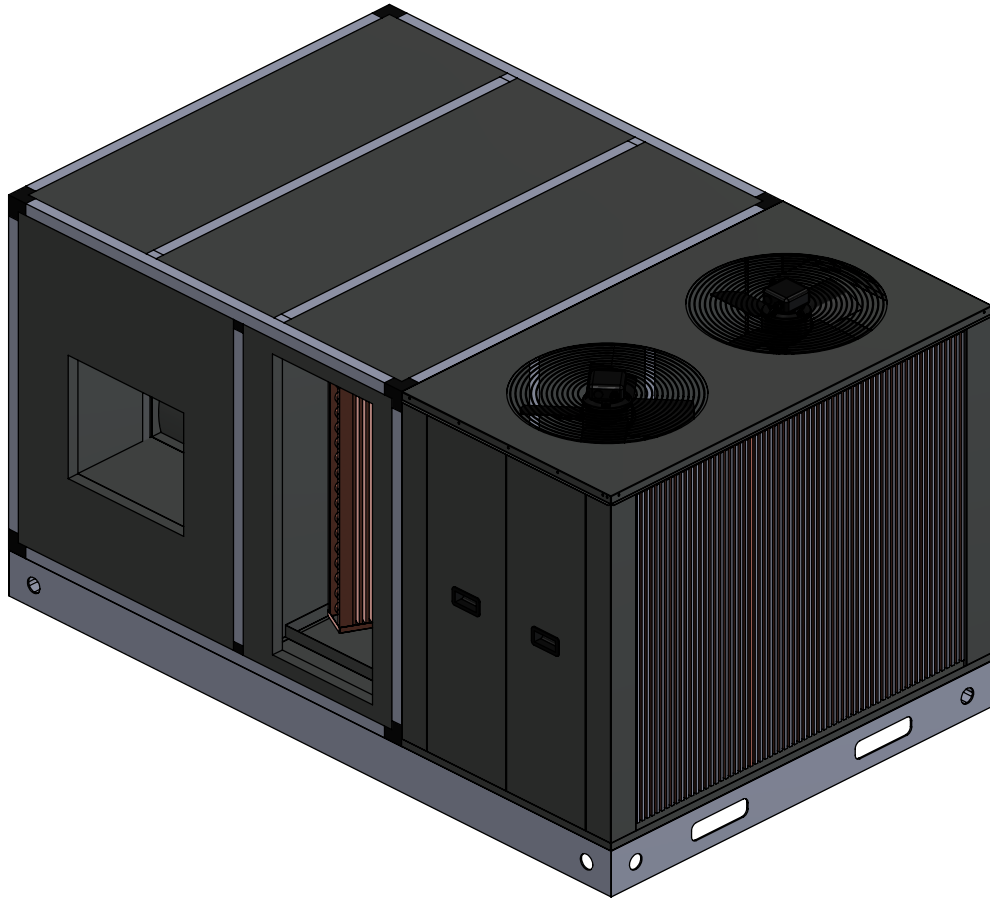

- Condenser side manufactured in large galvanized steel sheet. Air Handling side made of 1" double-walled heavy-gauge galvanized steel panels with insulation.
- Powder coated paint system: For a long-lasting professional finish. Additional Modine-Luvata corrosion resistant spray added for extra protection.
- Scroll type compressor, which offers greater protection against liquid damage. More efficient throughout its operational range; It operates at lower sound and vibration levels than traditional compressors.
- Easy-access panel to compressors.
- Certified electric motor (PSC motor).
- Evaporator and condenser coil made of copper tubes and aluminum fins with added Modine-Luvata corrosion resistant spray.
- Compact unit of two cooling circuits.
- High and low pressure switches.
- Bi-metal electrical protector.
- High capacity filter dryer.
- Pulley-transmission centrifugal motor-fan coupling.
- Fully insulated evaporator-fan compartment with easy-access hinged panels.
- Stainless steel rivet-nut machine-threaded hex head screw-fixed service panels.
- Reinforced iron metal base with forklift openings.

Table of Contents

- 3** Precautions
- 4** Technical Specifications
- 5** Blower Performance Data
- 6** System Performance Data
- 7** Unit Dimensions
- 9** Safety Distance
- 10** Safe Handling
- 11** Refrigeration Diagram
- 12** Electric Diagram
- 14** Suggestions for Installation
- 15** Suggestions for Ignition
- 16** Maintenance Recommendations
- 17** Exploded View
- 18** Parts List - GXPK150DG4AB
- 19** Parts List - GXPK150DG7AB
- 20** Notes

This document will provide relevant information about the equipment. All the information included in this manual is subject to changes without prior notice. The suggestions of this manual are addressed to the personnel in charge of planning, installing, implementing, and maintaining the equipment, having corresponding knowledge for the realization of these type of works.

	WARNING
<p>Installation, adjustment, alteration, service or maintenance can cause personal injuries, death, or property damage. The installation and service must be carried out by a professional or equivalent professional installer or a service agency.</p>	

	CAUTION
<p>Physical contact with edges while applying excessive force or rapid movement with metal can cause personal injury. Be careful when working near these areas during installation or during the service of this equipment.</p>	

Precautions

In the following document you can find several useful suggestions on the ignition, use and maintenance of your air cooled horizontal package unit. Preventive care will help you save time and money during the useful life of the unit.

Precaution

- Contact an authorized technician in case of requiring the repair or maintenance of this unit.
- Contact an authorized installer to install this unit.
- In case of replacement of supply cables, this activity can only be carried out by authorized personnel.
- The installation must be carried out only by authorized personnel in accordance with wiring standards.
- The electrical installation must be carried out in accordance with current legal norms.
- Make sure the electric service is adequate for the selected equipment model.
- Make sure the equipment is correctly installed. To avoid electrical discharges and possible fires, the correct connection is important.
- If the voltage supplied to this equipment is outside the specified range, the equipment will not work and this can cause the main components of the equipment (compressors - motors) and other electrical components to burn out.
- Do not store or use gasoline or other flammable products near this equipment or other artifacts.

Incorrect manipulation due to lack of knowledge of the instructions or suggestions described in this manual can harm the unit. We do not assume any responsibility for damages derived from incorrect, inappropriate or not planned use, or to consequences of unauthorized repairs or modifications. Keep in mind that this document is only valid for the specified equipment and not for complete installation.


Technical Specifications

	GXPk150DG4AB	GXPk150DG7AB
GENERAL DATA		
Cooling Capacity (BTU/h)	150,000	150,000
Cooling Tons	12.5	12.5
Efficiency ⁽¹⁾ EER	11.8	11.8
EVAPORATOR FAN		
Transmission	Pulley	Pulley
Number of Fans	1	1
Rated Air Flow ⁽¹⁾ (CFM)	5000	5000
Blower (DxW)	15 x 15	15 x 15
Number of Motors	1	1
Current (A)	8.4	4.2
Power (HP)	3	3
RPM	1800	1800
EVAPORATOR COIL		
Type (Tube / Fin)	Copper / Copper	Copper / Copper
Rows	3	3
Fins Per Inch	14	14
CONDENSER FAN		
Number of Fans	2	2
Type	Axial	Axial
Number of Motors	2	2
Current (A)	1.4	0.9
Power (W)	434	554
RPM	1037	1052
Fan Diameter (mm)	550	550
CONDENSER COIL		
Type (Tube / Fin)	Copper / Copper	Copper / Copper
Rows	3	3
Fins Per Inch	17	17
COMPRESSOR		
Refrigerant	R410a	R410a
Quantity	2	2
Type	Scroll	Scroll
RLA ⁽²⁾	25.9 / 23.2	12.5 / 11.2
LRA ⁽³⁾	164.0	75.0
ELECTRICAL DATA		
V / Ph / Hz	(208-230 / 3 / 60)	(460 / 3 / 60)
Operating Current ⁽¹⁾ (A)	63.0	31.0
Unit Total Amperage ⁽¹⁾ (A)	63.0	31.0
Minimum Circuit Ampacity (A)	70.0	35.0
Max. Overload Protection (A)	96.0	47.0
NET WEIGHT (kg)	895	895
GROSS WEIGHT (kg)	905	905

Notes: ¹ Data corresponding to a certain operation condition based on the AHRI 210/240 or 360 standard. ² This Rated Load Amps data (RLA) corresponds to a single compressor. ³ This Locked Rotor Amps data (LRA) corresponds to a single compressor. ⁴ The information provided in the table can change without prior notice.

Blower Performance Data

Model A15-15A	Flow 5000 cfm	Pressure 1.40 in-wg	Temperature 70 °F	Altitude 100 ft	Density 0.075 lb/ft ³	Q Derate 0 cfm	P Derate 0.00 in-wg	Vav Set Point 0.00 in-wg
Fan Tag	Flow 5000 cfm	Pressure 1.40 in-wg	Power 2.26 hp	Static Efficiency 48.9 %	Total Efficiency 62.3 %	Speed 813 rpm	Outlet Velocity 2488 fpm	Efficiency Rating FEG71
	Impeller Dia 15.0 in	Outlet Area 2.01 ft ²	Max. Speed 1600 rpm	AMCA Class 0	Drive Belt Drive	Blades 51	P Volume 7.32 ft ³	TurnDown 100 %



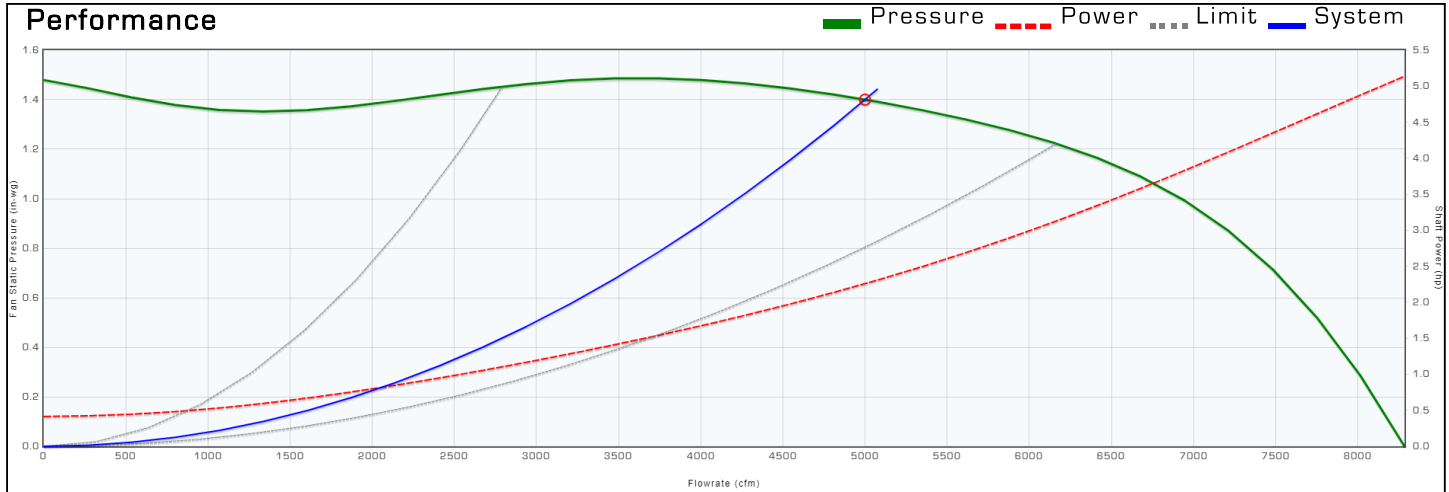


Sound(Lwi)	63	125	250	500	1000	2000	4000	8000	Lw	LwA
	87	86	82	80	79	77	75	73	91	84

Notes: Airflow performance data are obtained in accordance with AMCA 210-07. Installed performance will vary depending on extent of cabinet geometry

Sound data are estimated from industry experience for the type of product selected. Data should be used for comparison purposes only and do not represent installed values.


Unit Dimensions

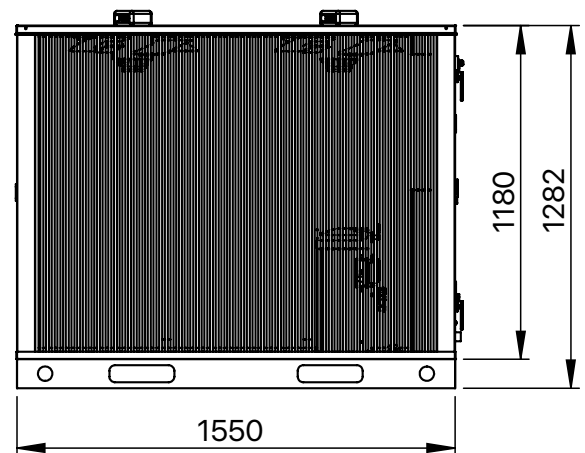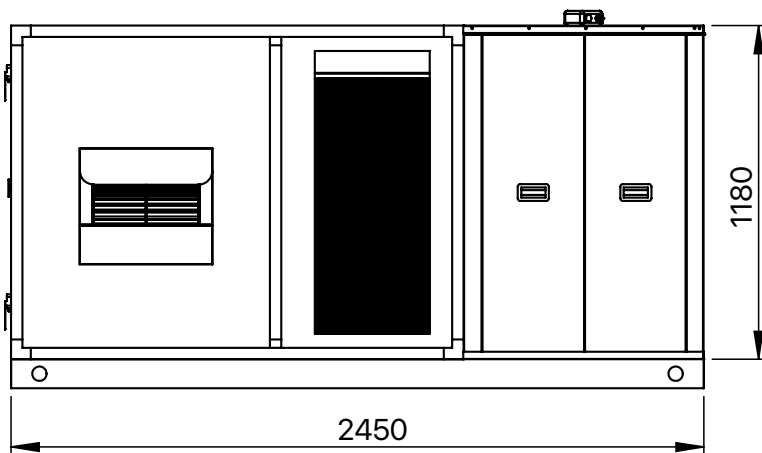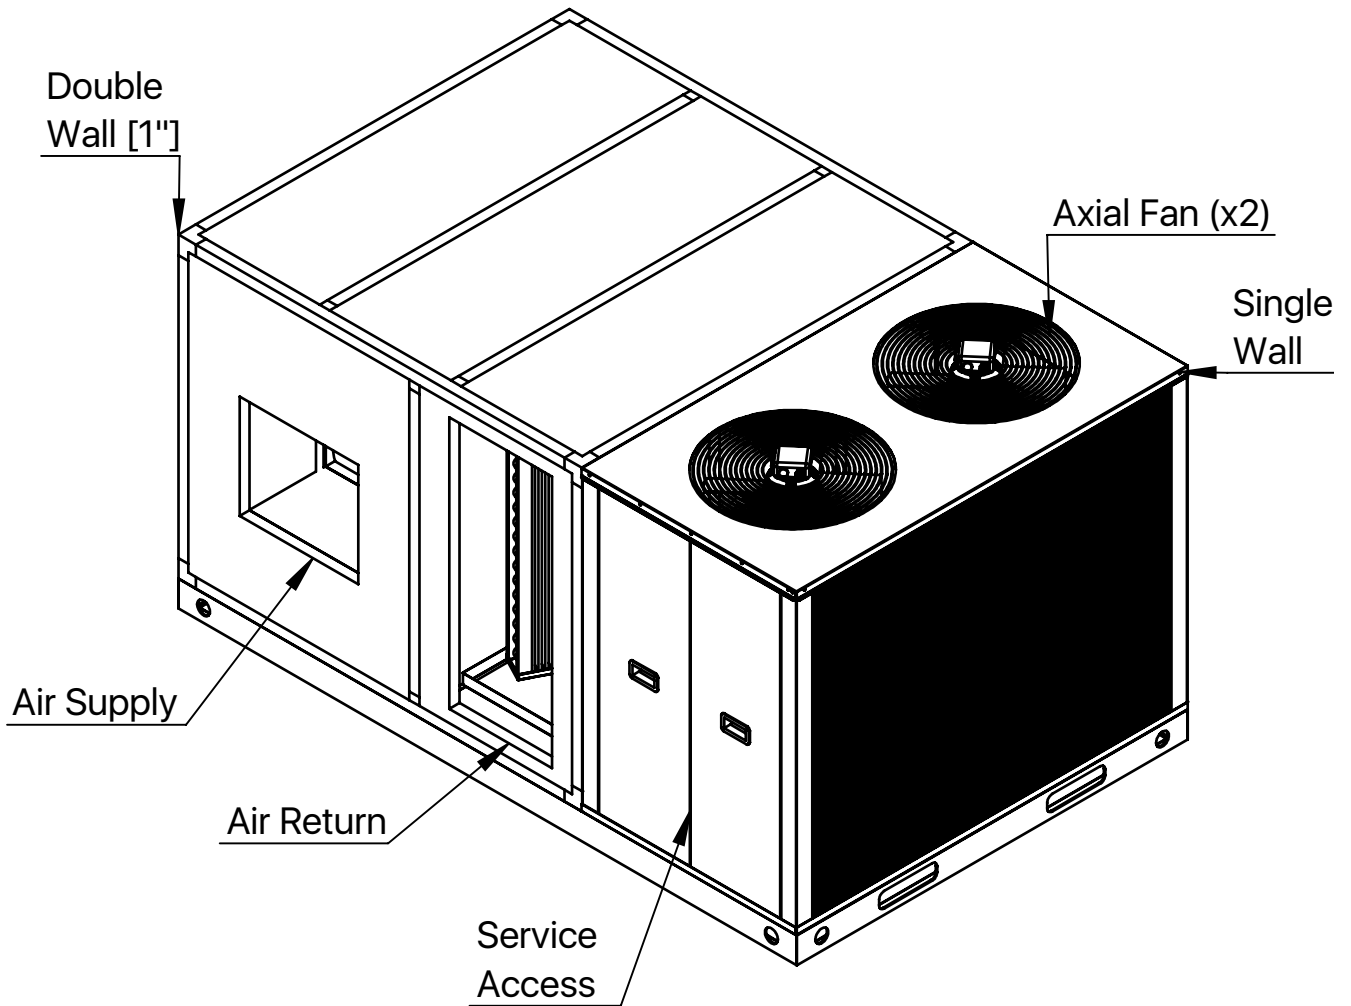

Note: All measurements are in millimeters (mm).

Unit Dimensions


TOP VIEW

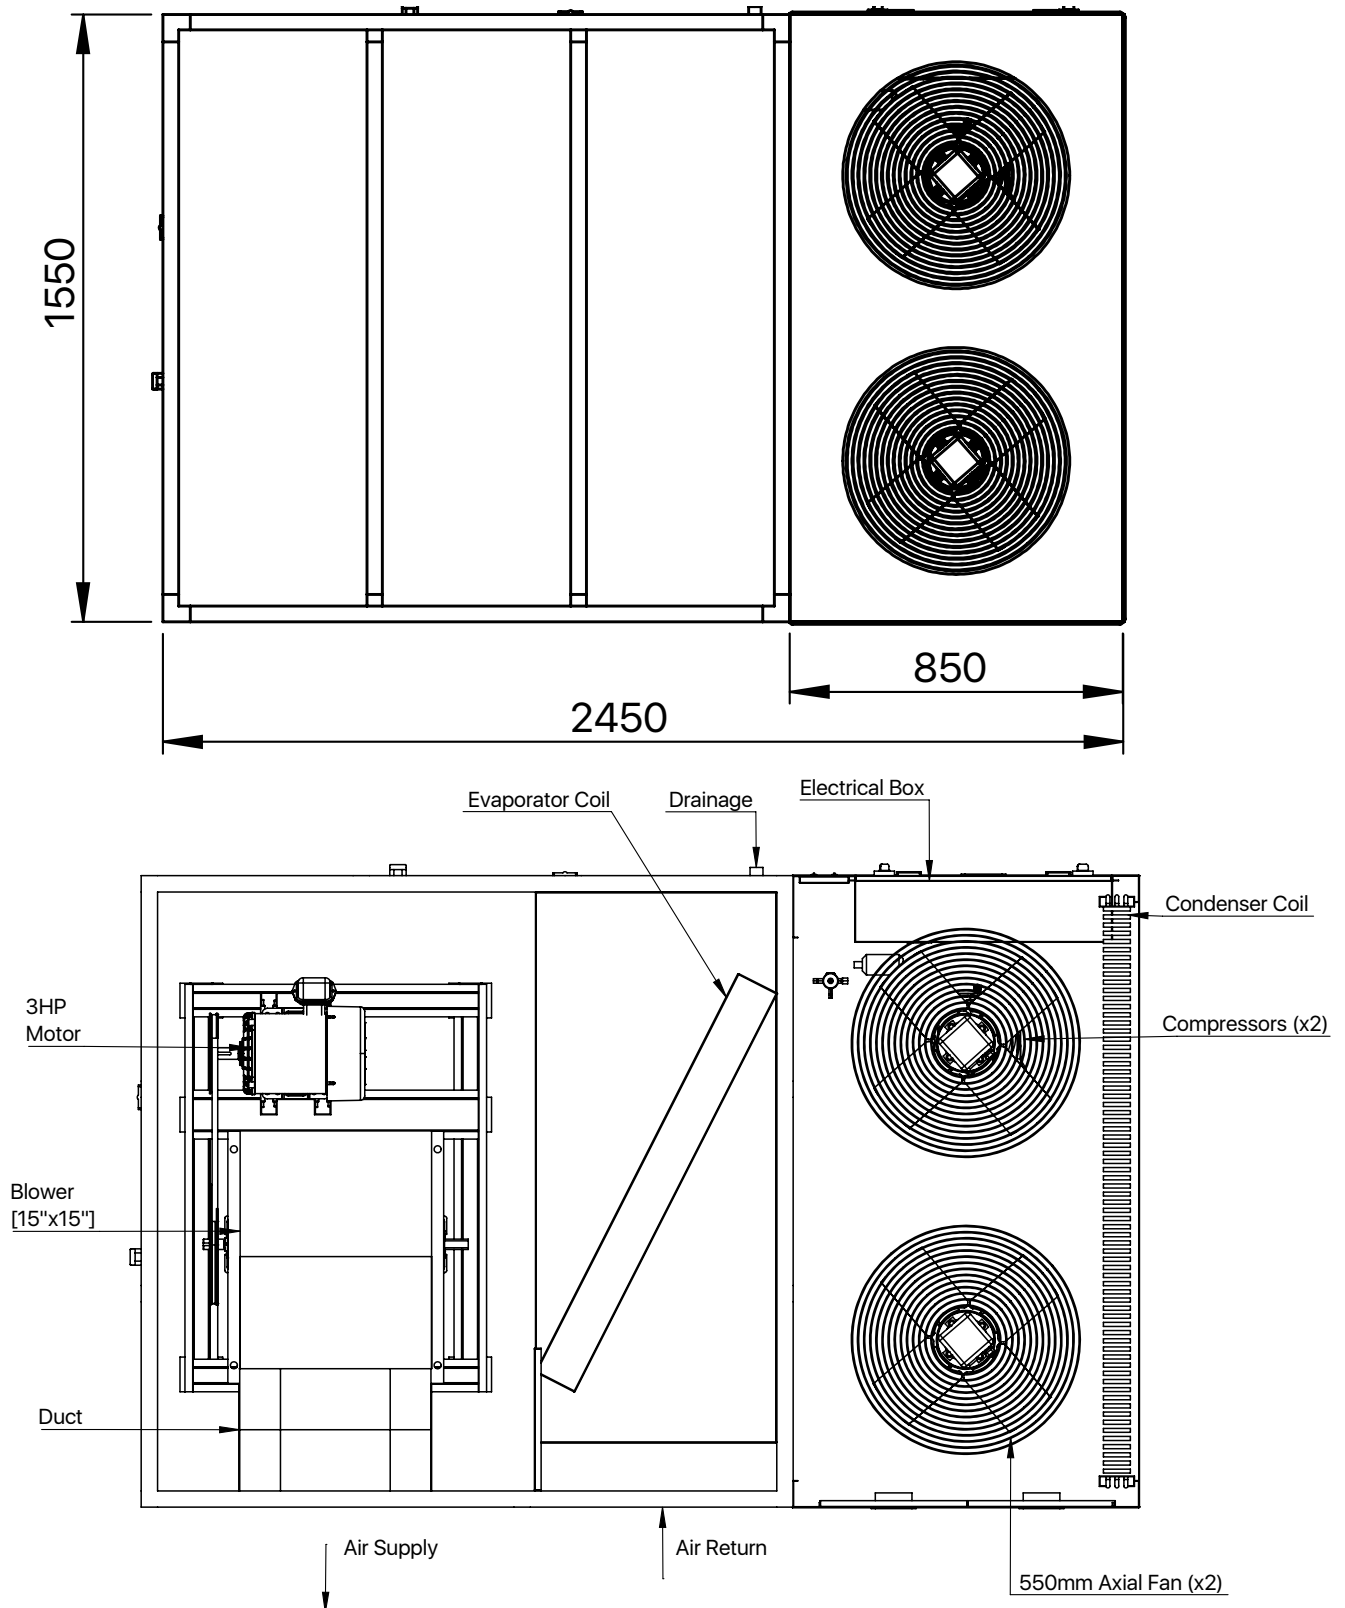


Note: All measurements are in millimeters (mm).

Safety Distance


The following minimum free spaces must be observed for the proper performance and capacity of the unit.

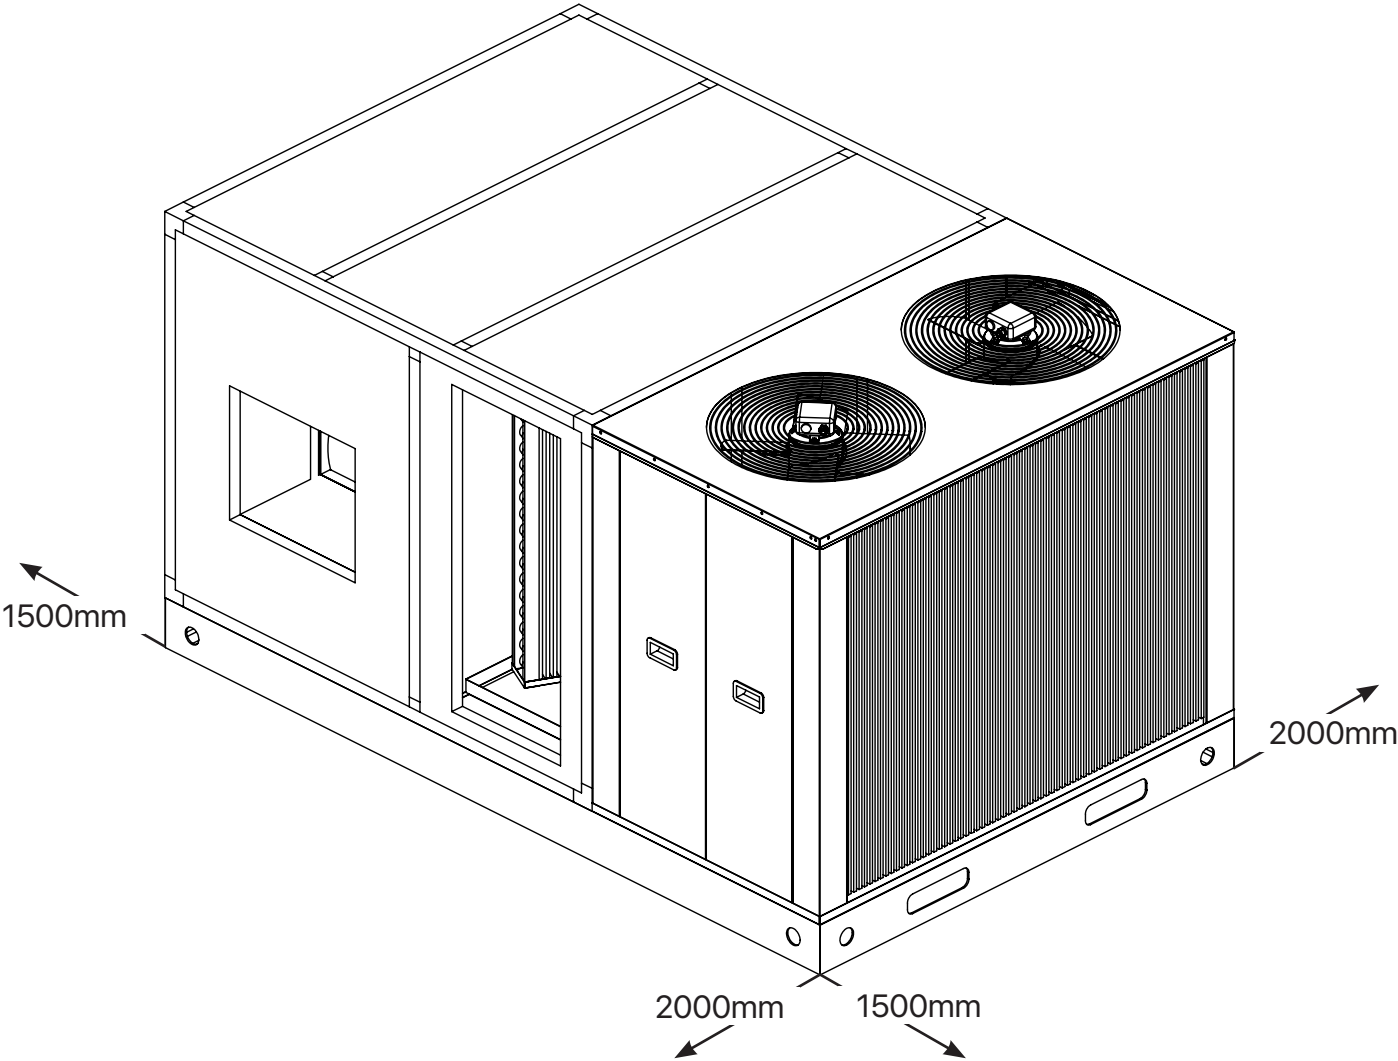

Safe Handling

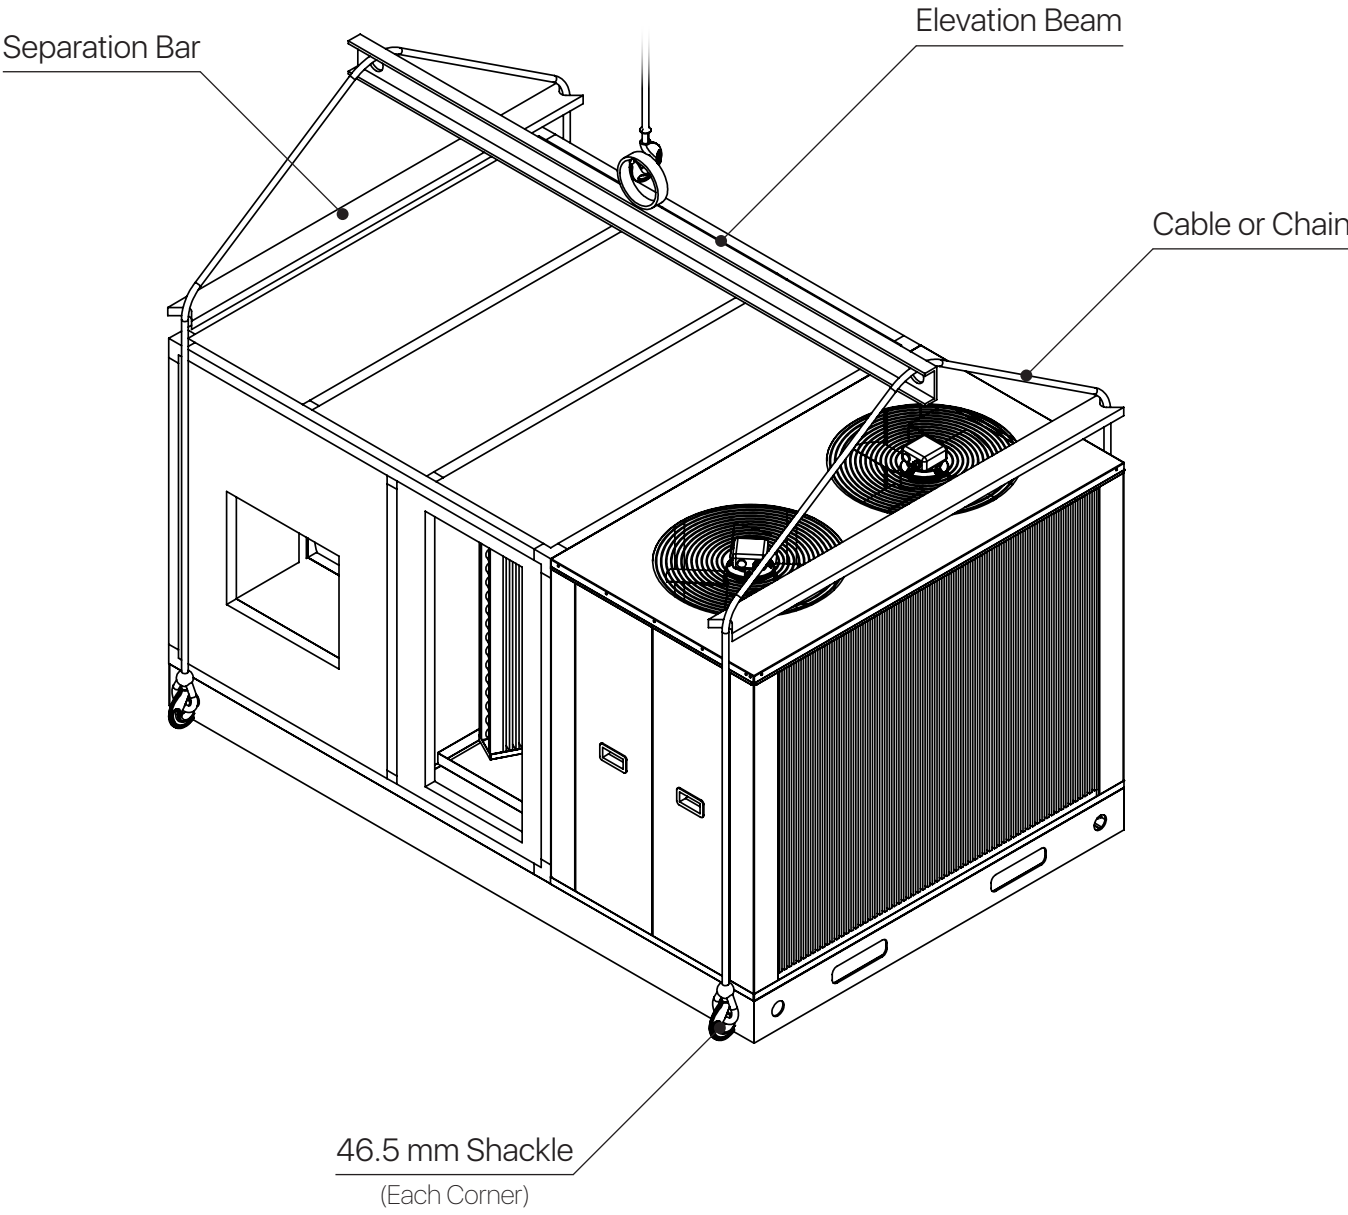

Refrigeration Diagram

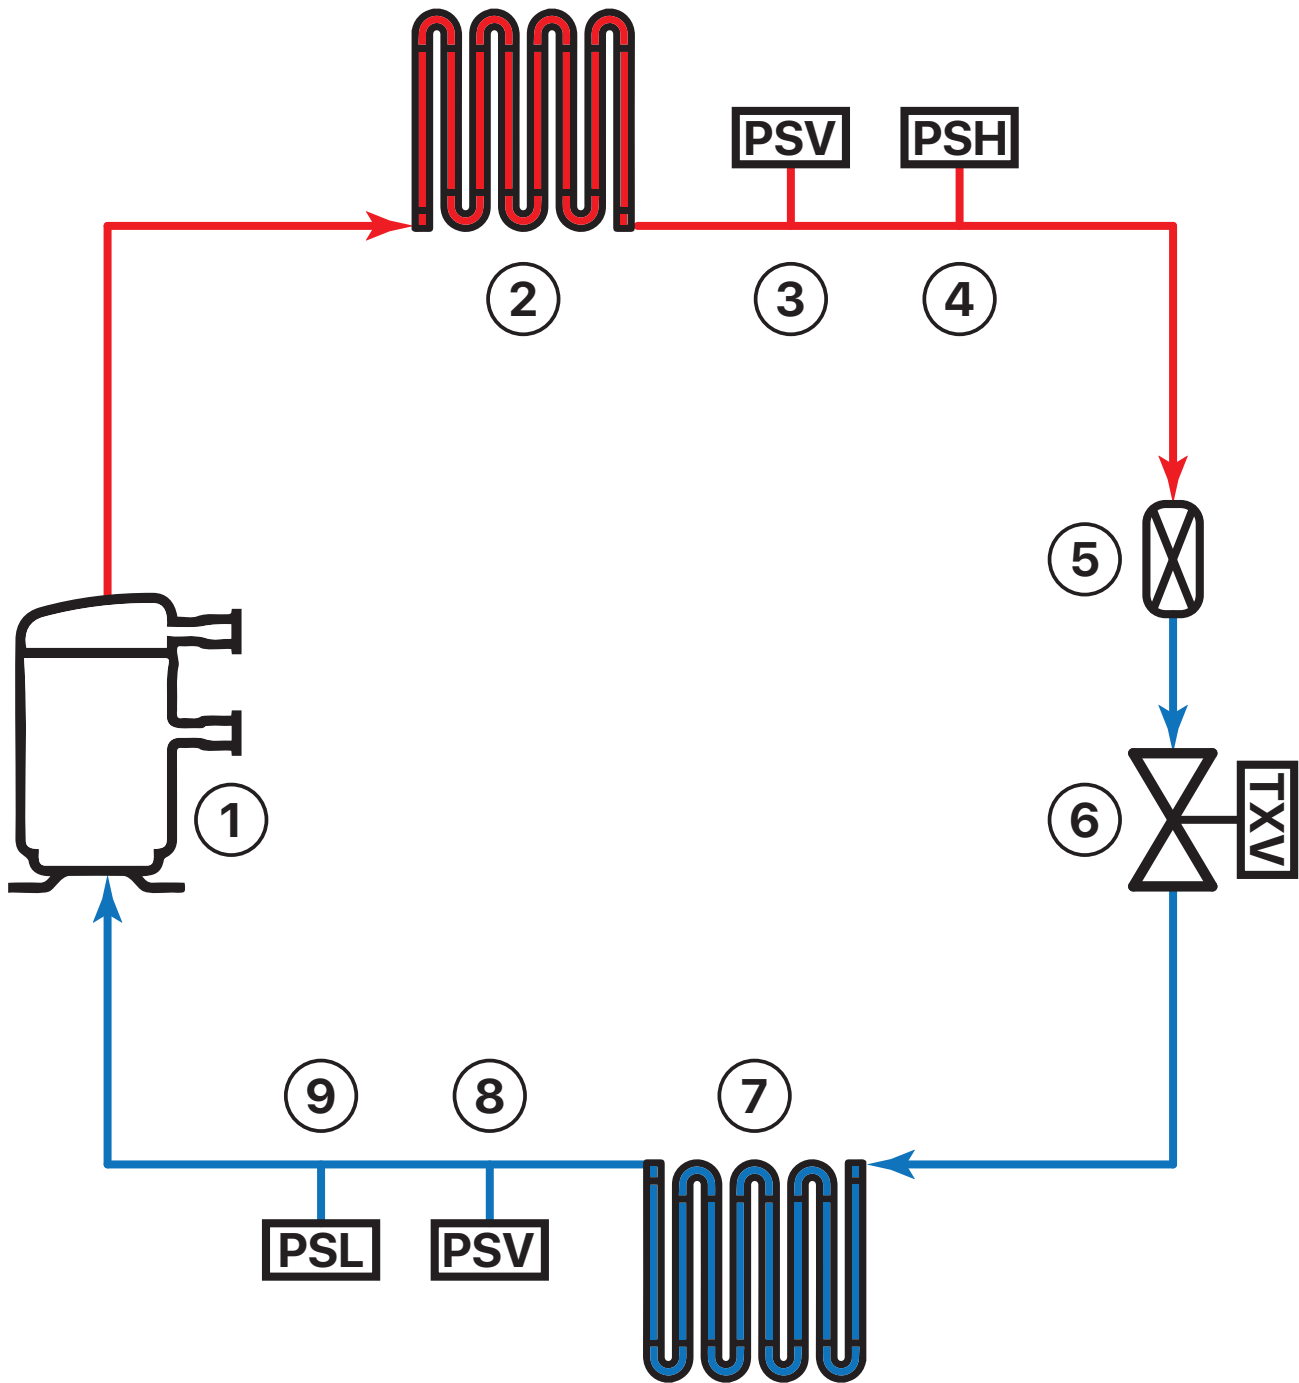


REF.	DESCRIPTION
1	SCROLL COMPRESSOR
2	CONDENSER COIL AND AXIAL FAN
3	ACCESS VALVE FOR PRELOAD AND CONTROL
4	HIGH PRESSURE SWITCH
5	FILTER DRYER

REF.	DESCRIPTION
6	EXPANSION VALVE (TXV)
7	EVAPORATOR COIL AND BLOWER FAN
8	ACCESS VALVE FOR PRELOAD AND CONTROL
9	LOW PRESSURE SWITCH


Electric Diagram

While performing the electrical installation, the authorized technician must verify that they are complying with the electrical circuit of the equipment shown below:


208V-230V / 3PH / 60Hz (POWER)

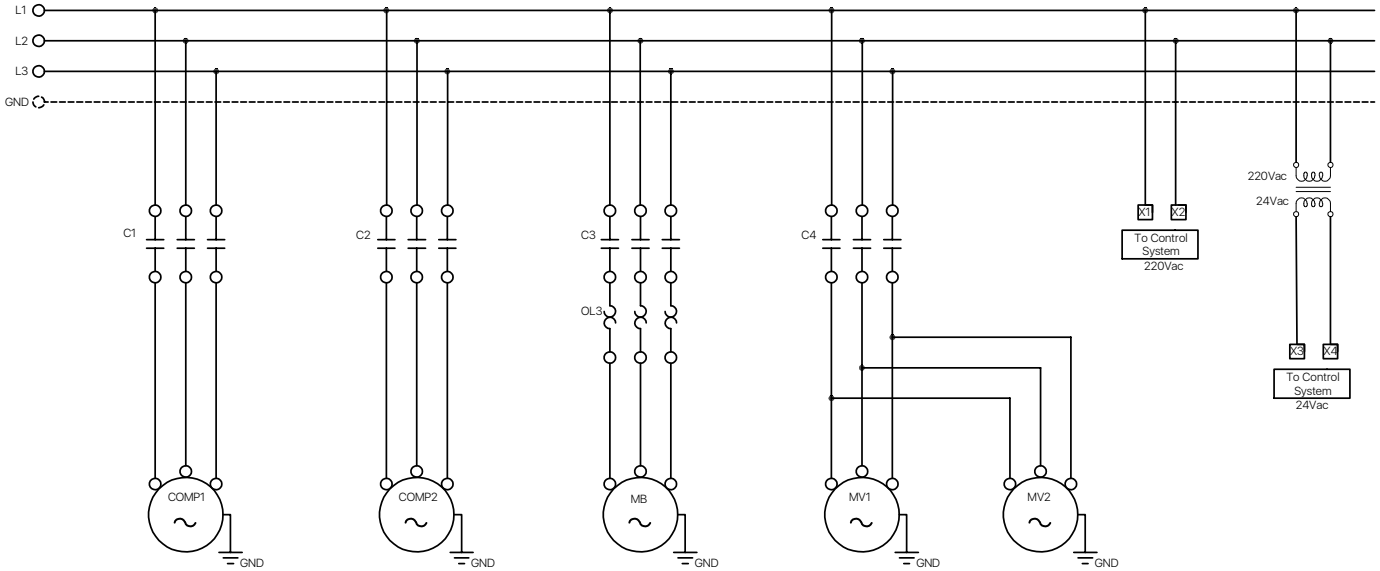

(CONTROL)

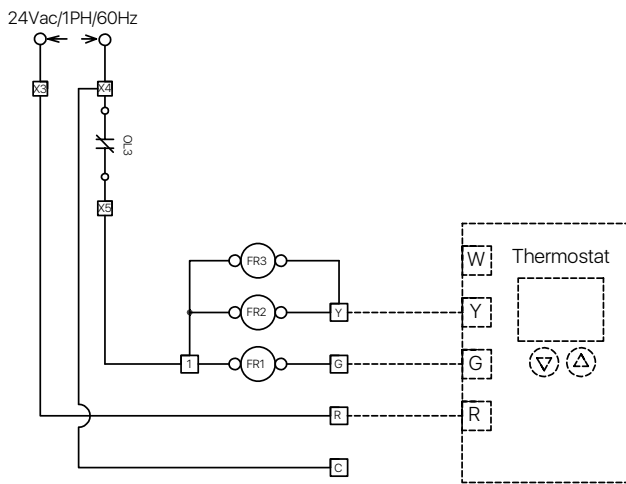

Use points C & R to power thermostats that require external 24Vac power.

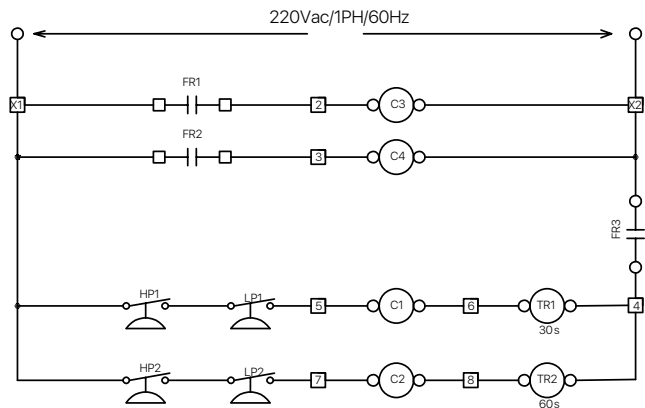

WARNING

High Voltage: Disconnect all supply source before manipulating this unit. Multiple energy sources can be present. Not doing so can cause property damage, personal injury or death.

Elements:


- COMP: Compressor
- MB: Blower Motor
- MV: Condenser Motor
- L: AC Supply Lines
- FR: Auxiliary Relay
- G: Fan Signal
- Y: Condenser Signal
- W: Dehumidifier Signal (N/A)
- R: Common 24Vac Lines
- C: Auxiliary 24Vac Lines

- HP: High Pressure Switch
- LP: Low Pressure Switch
- TR: Timer
- C1: Contactor
- OL: Thermal Relay
- GND: Ground
- — —: Factory Wiring
- - -: Field Wiring


Electric Diagram

While performing the electrical installation, the authorized technician must verify that they are complying with the electrical circuit of the equipment shown below:


460V / 3PH / 60Hz (POWER)

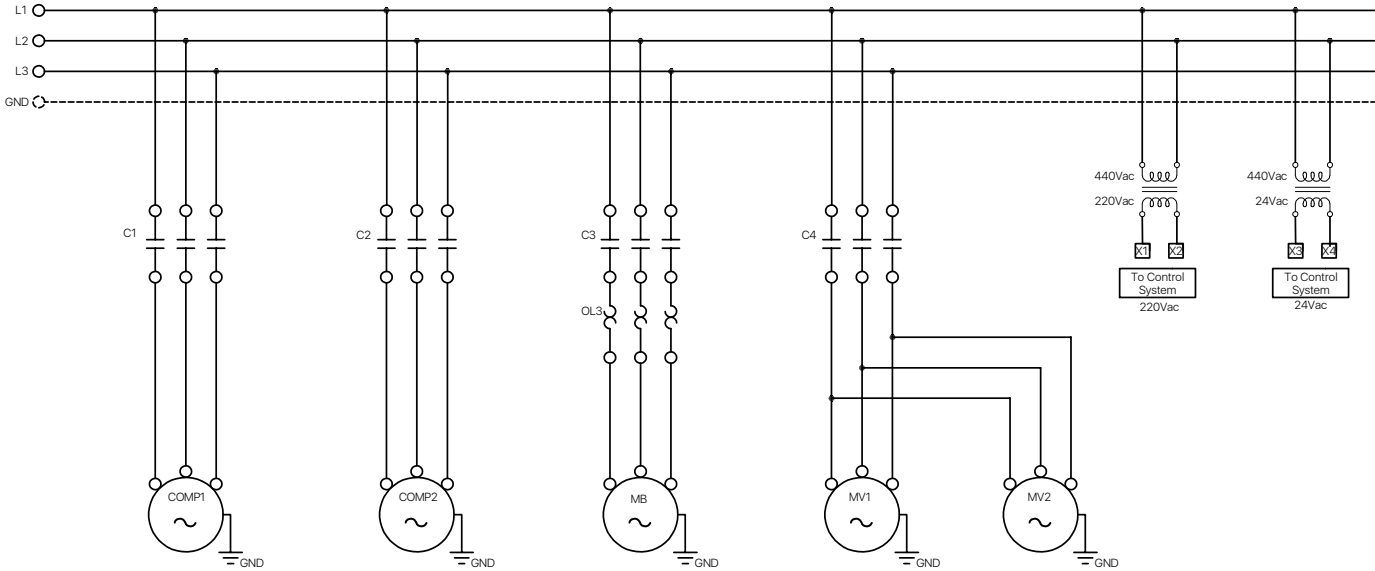

(CONTROL)

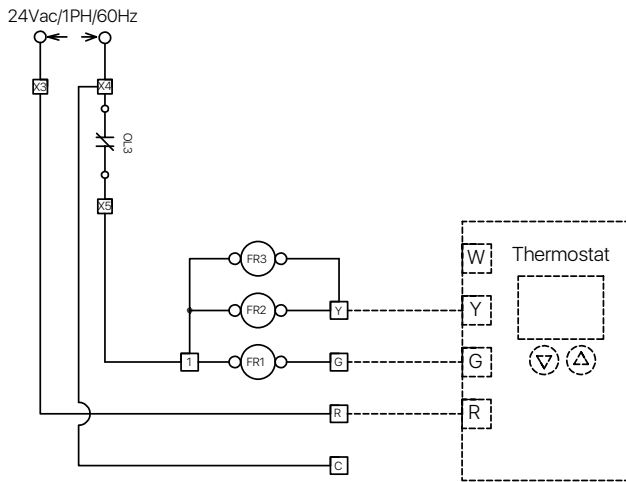

Use points C & R to power thermostats that require external 24Vac power.

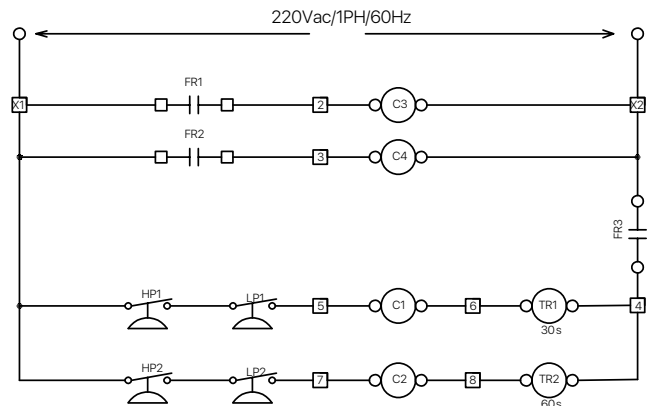

WARNING

High Voltage: Disconnect all supply source before manipulating this unit. Multiple energy sources can be present. Not doing so can cause property damage, personal injury or death.

Elements:

- COMP: Compressor
- MB: Blower Motor
- MV: Condenser Motor
- L: AC Supply Lines
- FR: Auxiliary Relay
- G: Fan Signal
- Y: Condenser Signal
- W: Dehumidifier Signal (N/A)
- R: Common 24Vac Lines
- C: Auxiliary 24Vac Lines

- HP: High Pressure Switch
- LP: Low Pressure Switch
- TR: Timer
- C1: Contactor
- OL: Thermal Relay
- GND: Ground
- : Factory Wiring
- - -: Field Wiring

Suggestions for Installation

The conditions that must be taken into account in general before installing the equipment:

The works on the units must be carried out only by professionals. Do not connect the power supply until all the work is finished.

Considerations to take into account

1. It is very important in direct transmission equipment that air outlets are not linked in the same duct before a minimum distance of 1.5 meters and preferably at a distance of 2 meters.
2. Make sure the suspension support is strong enough to support the weight of the unit.
3. Most of the equipment weight is located in the refrigerant condensation zone, take into account for the installation of the base where the equipment will rest.
4. Select a place for an easy drainage connection. It is important to install a drainage trap.
5. Be sure to install the equipment level to ensure proper operation of the unit.
6. Select a place far from gases or explosive or combustible materials.
7. Preview the necessary free spaces for maintenance and technical assistance services.
8. Verify that the model, options and tension, indicated in the characteristics plate are correct.
9. Verify that the energy supply meets the specifications that appear on the equipment plate.
10. All field wiring must be carried out by duly qualified personnel. The wiring must be adjusted to the applicable local regulations.
11. Siga los requerimientos apropiados que establecen el código eléctrico nacional sobre las conexiones a masa.
12. Follow the appropriate requirements that establish the National Electric Code on mass connections.
13. Visually inspect the exterior of the unit, including the ceiling, to detect possible signs of damage during transport.
14. Perform a visual verification of the internal components to identify whether there is transport damage, as soon as possible, after the reception of the unit.
15. Avoid obstructions in the supply and return of air so the inner air will circulate properly.

Suggestions for Ignition

Briefly, the steps for the ignition and commissioning of the equipment are as follows (only an authorized technician can do it):

Never do work without the help of professionals. Before making any connection, be sure not to have connected or energized the equipment or sources of equipment until all the work is finished.

Steps for ignition of the unit

1. From the breaker box, take electric power to the equipment. Verify that the capacity of the disjunct is the required to protect the equipment.
2. Connect lines to the power beams, indicated as L1 and L2 of the electric box or L1, L2 and L3 for three-phase equipment.
3. Confirm that the ground connection is reliable and that the ground cable is connected to the special device of the building. Never connect the ground cable with gas, water, telephone cables, etc.
4. From the equipment, wire the three control lines R, G, Y & O*, indicated in the electric box to the respective thermostat terminals.
5. The operation of the air conditioning system is controlled by the interior thermostat. You must adjust the thermostat to a set temperature (set point) to keep the interior temperature at the level you select.
6. The frequent thermostat movement produces faster cycles, which is potentially harmful to the compressor. For no reason move the thermostat temperature selector for at least 5 minutes after the compressor has turned off.
7. Ensure that all connections are correctly made, subject and according to the electrical diagrams provided.
8. Action switches (installed in the field) to energize the equipment.
9. Supply sufficient electrical capacity and respect the electrical cable section necessary for specified consumption.

Maintenance Recommendations

With due maintenance and care, the air conditioning unit will work successfully. Before maintaining, consider the following security precautions:

WARNING!

To prevent damage to the equipment and personal injury or death, disconnect all electricity supply to the equipment before removing access panels to perform some maintenance work. Disconnect electricity to the interior and exterior units.

NOTE: It is possible that there is more than one electric disconnection switch.


WARNING!

Although special care has been taken to minimize acute edges in the construction of your equipment, be extremely careful when handling the pieces or putting your hand inside it.

Recommendations

1. Clean the air filter carefully, this in order to avoid a restricted air flow, which decreases the efficiency of the unit and its useful life.
2. Check the status of the evaporator coil. It is ideal that there is no obstruction, in order to guarantee the free flow of the coil.
3. In case it is necessary to clean the coil, you can do it with a detergent solution and rinse it with water. This may require coil extraction. Be careful not to fold or damage the fins.
4. Do not allow waste to accumulate around the unit or above it.
5. Periodically inspect the equipment power. Make sure to have the necessary power for the operation of this. The current of the main components of the system must be monitored according to the equipment plate.
6. Periodically inspect work pressures in the system (high and low pressure). They should not exceed their operation rank in normal use conditions.
7. It is recommended to verify parameters such as overheating and refrigerant overcooling. Which under normal conditions of use will have values between 8 and 15 ° F for overheating, and values between 5 and 15 ° F in overcooling.
8. Periodically review the condenser fan status to avoid dirt or friction between sheets that can unbalance the fans.
9. Periodically review that there is no obstruction in the equipment drainage to avoid overflowing water from the equipment.

Exploded View

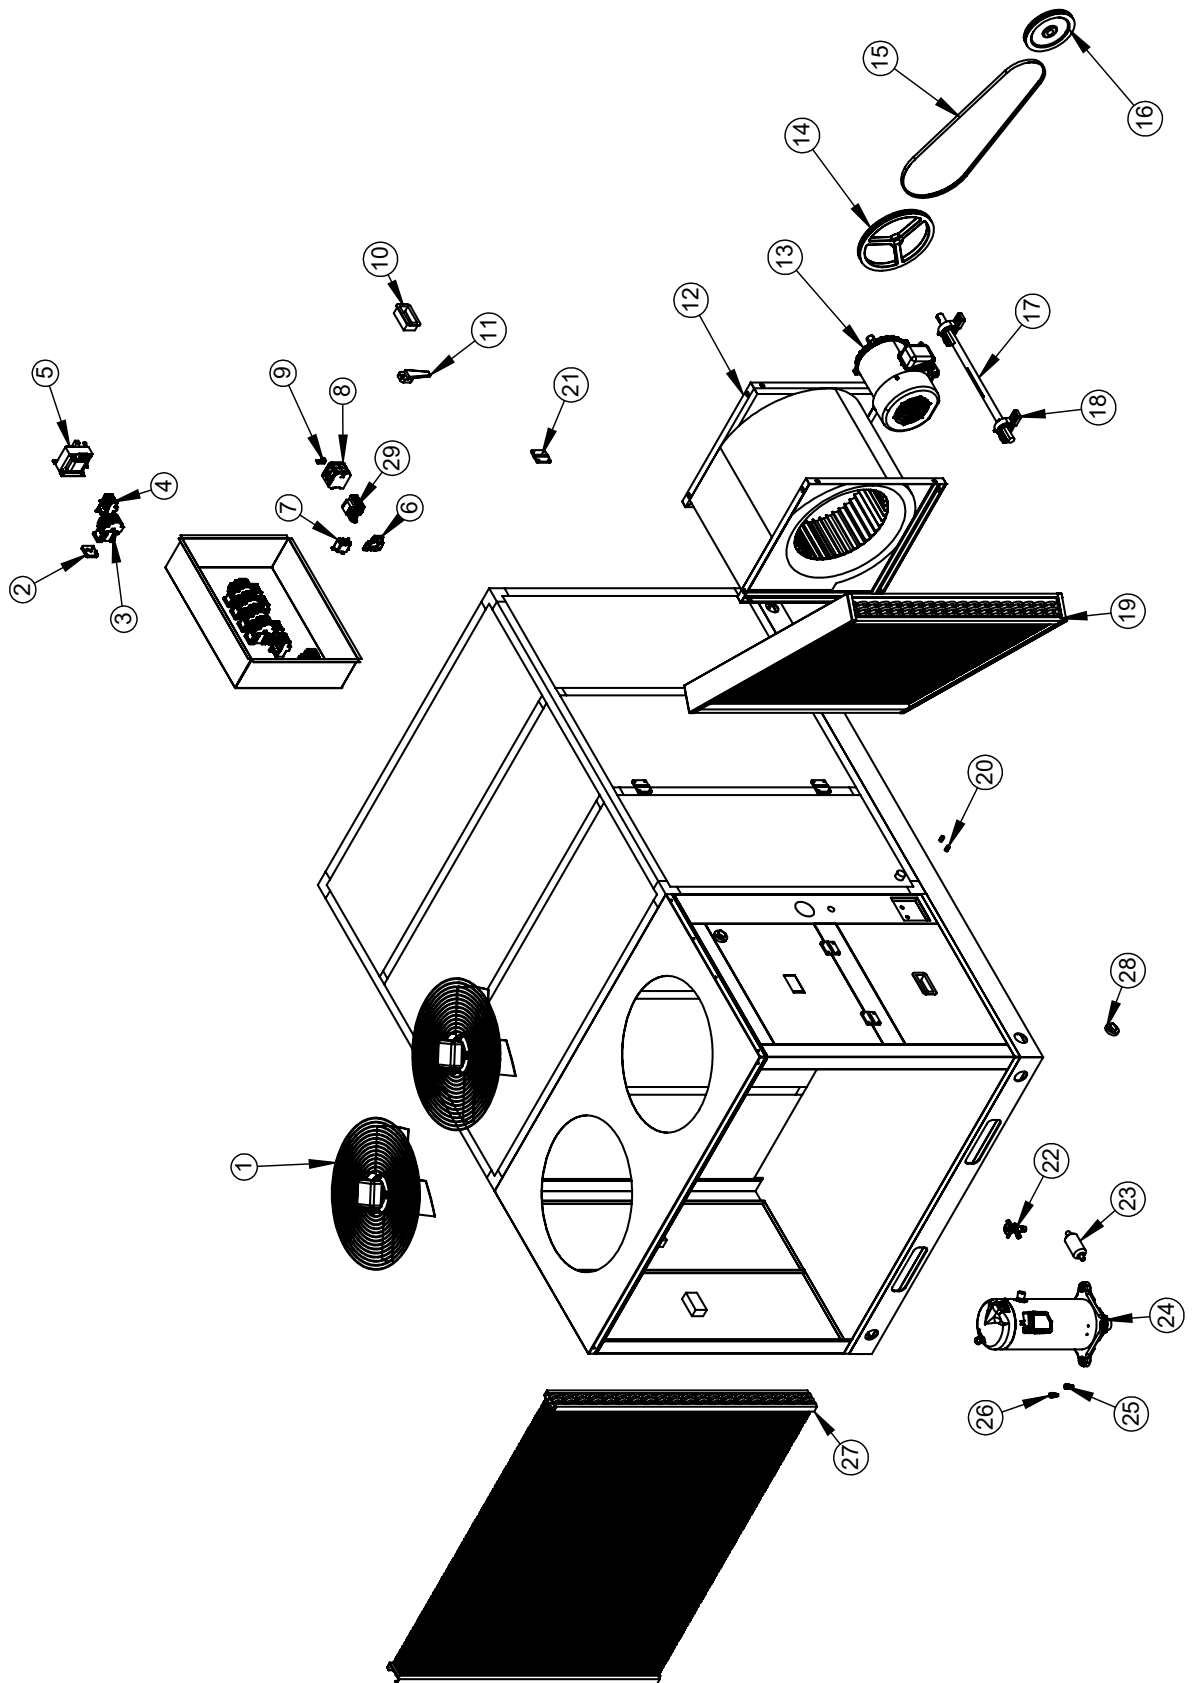

Parts List - GXPk150DG4AB

REF.	PART NAME	QTY.	PART NUMBER
1	AXIAL FAN WITH 550MM DIAMETER	2	10039022
2	TIMER	1	16010001
3	CONTACTOR 9A-3P-220V	1	13030056
3.1	CONTACTOR 9A-3P-220V	1	13030056
3.2	CONTACTOR 32A-3P-220V	1	13030052
4	THERMAL RELAY 1.8 - 2.8 AMP	1	13031090
4.1	THERMAL RELAY 4 - 6.3 AMP	1	13031074
4.2	THERMAL RELAY 15 -23 AMP	1	13031071
5	440V A 220V 100VA TRANSFORMER	1	15110014
6	CONTROL TERMINAL BLOCK	12	13110010
7	FAN RELAY	3	15010002
8	POWER TERMINAL BLOCK	3	13110008
9	GROUND TERMINAL BLOCK	1	13110007
10	LARGE RECESSED HANDLE	8	59040001
11	NYLON HANDLE	8	51110010
12	15" X 15" X 1" CHINESE HOUSING CENTRIFUGAL FAN	1	20010033
13	3HP THREE-PHASE MOTOR	1	10060003
14	DRIVEN PULLEY BK120H	1	53031292
14.1	DRIVEN PULLEY BUSHING TYPE H 1"	1	53041002
15	DRIVE BELT	1	53040072
16	DRIVING PULLEY BK55H	1	53031299
16.1	DRIVING PULLEY BUSHING TYPE H 1 1/8"	1	53041003
17	AISI 4140 STEEL SHAFT 1"X65CM	1	73210015
18	1" PILLOW BLOCK	2	53020001
19	12,5 EVAPORATOR HEAT EXCHANGER	1	1EA1403-38048X
20	1/4"X0.032"X2" ACCESS VALVE	2	16C056002
20.1	ACCESS VALVE 1/4"X0.032"X2" WITH NUT	2	16C056001
21	HINGE	4	59040014
22	12,5TR 410A EXPANSION VALVE	1	3104007-1
23	12,5 FILTER DRYER	1	23010012
24	12,5 SCROLL TYPE SCROLL COMPRESSOR	1	14021315
25	R410A LOW PRESSURE SWITCH	1	31020017
26	R410A HIGH PRESSURE SWITCH	1	31020016
27	12,5TR CONDENSER HEAT EXCHANGER	1	1CA1703-46055
28	1/4" METAL CLOSURE	1	59040003

Parts List - GXPK150DG7AB

REF.	PART NAME	QTY.	PART NUMBER
1	AXIAL FAN WITH 550MM DIAMETER	2	10039022
2	TIMER	1	16010001
3	CONTACTOR 9A-3P-220V	1	13030056
3.1	CONTACTOR 9A-3P-220V	1	13030056
3.2	CONTACTOR 32A-3P-220V	1	13030052
4	THERMAL RELAY 1.8 - 2.8 AMP	1	13031090
4.1	THERMAL RELAY 4 - 6.3 AMP	1	13031074
4.2	THERMAL RELAY 15 -23 AMP	1	13031071
5	440V A 220V 100VA TRANSFORMER	1	15110014
6	CONTROL TERMINAL BLOCK	12	13110010
7	FAN RELAY	3	15010002
8	POWER TERMINAL BLOCK	3	13110008
9	GROUND TERMINAL BLOCK	1	13110007
10	LARGE RECESSED HANDLE	8	59040001
11	NYLON HANDLE	8	51110010
12	15" X 15" X 1" CHINESE HOUSING CENTRIFUGAL FAN	1	20010033
13	3HP THREE-PHASE MOTOR	1	10060003
14	DRIVEN PULLEY BK120H	1	53031292
14.1	DRIVEN PULLEY BUSHING TYPE H 1"	1	53041002
15	DRIVE BELT	1	53040072
16	DRIVING PULLEY BK55H	1	53031299
16.1	DRIVEN PULLEY BUSHING TYPE H 1 1/8"	1	53041003
17	AISI 4140 STEEL SHAFT 1"X65CM	1	73210015
18	1" PILLOW BLOCK	2	53020001
19	12,5 EVAPORATOR HEAT EXCHANGER	1	1EA1403-38048X
20	1/4"X0.032"X2" ACCESS VALVE	2	16C056002
20.1	ACCESS VALVE 1/4"X0.032"X2" WITH NUT	2	16C056001
21	HINGE	4	59040014
22	12,5TR 410A EXPANSION VALVE	1	3104007-1
23	12,5 FILTER DRYER	1	23010012
24	12,5 SCROLL TYPE SCROLL COMPRESSOR	1	14021315
25	R410A LOW PRESSURE SWITCH	1	31020017
26	R410A HIGH PRESSURE SWITCH	1	31020016
27	12,5TR CONDENSER HEAT EXCHANGER	1	1CA1703-46055
28	1/4" METAL CLOSURE	1	59040003
29	TRANSFORMADOR 220V A 24V 75VA	1	15110013

Notes



In accordance with its continuous progress policy and product improvement, Goodman reserves the right to make changes without prior notice.